



CURVED COPPER PEDESTAL SINK INSTALLATION

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Signature Hardware accepts no liability for any damage to the floor, walls, plumbing, sink, or personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the sink for damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

GETTING STARTED

- Ensure that you have gathered all of the required materials that are needed for the installation.
- Ensure that your bathroom floor is adequately supported, and the finished floor is level.
- Because wall construction and materials vary from home to home, Signature Hardware does not always provide mounting hardware. The appropriate mounting hardware can be purchased from your local hardware store.
- For the following instructions, it is assumed that the in-wall plumbing has already been prepared.
- **IMPORTANT:** This sink requires behind the wall access, usually from the other side of the wall, to make plumbing connections. An access panel will need to be installed for easy access to the shutoff valves on the water lines.

TOOLS AND MATERIALS:



Pencil



Tape Measure



Drywall Saw




Silicone Sealant
(100% Neutral
Cure)




CURVED COPPER PEDESTAL SINK INSTALLATION

INSTALLATION


1. Remove the sink from the pedestal. Place the pedestal in the desired installation location. On the wall, trace around the inside of the opening on the back of the pedestal to form a rectangular outline.

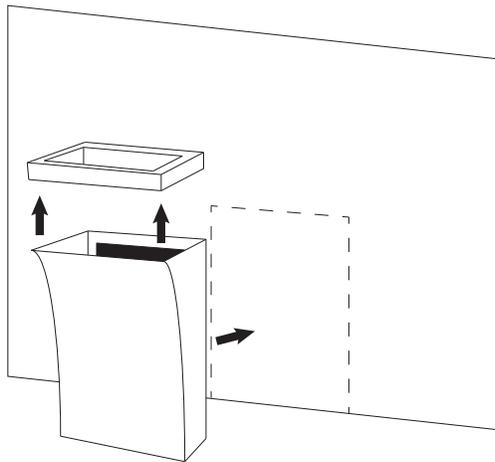


2. Move the pedestal away from the installation location. To install the sink, both sides of the wall must be opened to allow all plumbing connections to be made. Use a drywall saw to cut along the marked outline from step 1. Cut the same size hole into the drywall in the room behind it.

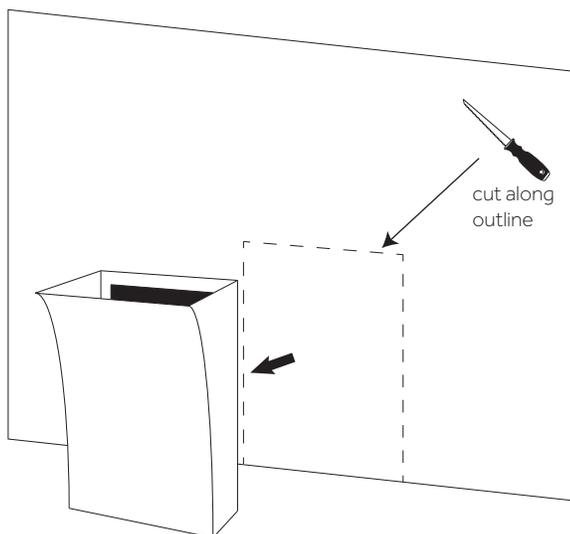

3. Move the pedestal back into position at the installation location. Fasten the pedestal to the wall by applying a generous amount of silicone sealant along the rim on the back.

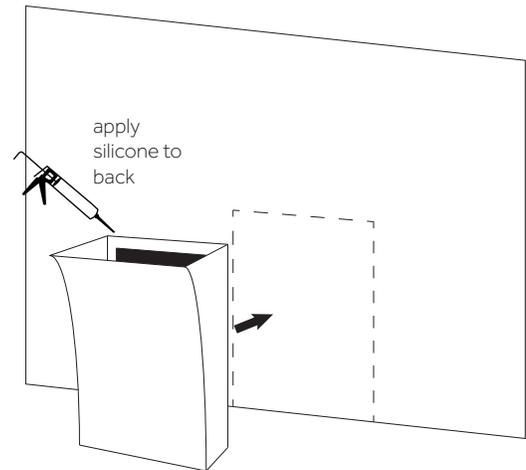


4. Before attaching the sink to the pedestal, pre-install the faucet and drain onto the sink. Refer to the installation instructions of the faucet and drain for guidance if needed.

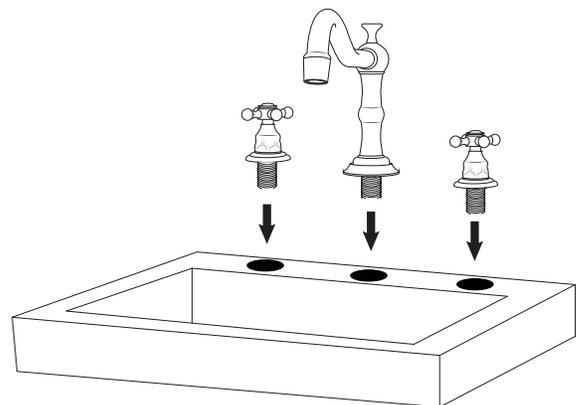




CURVED COPPER PEDESTAL SINK INSTALLATION

5. Once the faucet and drain is installed, place the sink onto the pedestal. If desired, apply a bead of silicone sealant along the inside the pedestal where the sink is inserted. Wipe away any excess sealant immediately using a damp cloth.

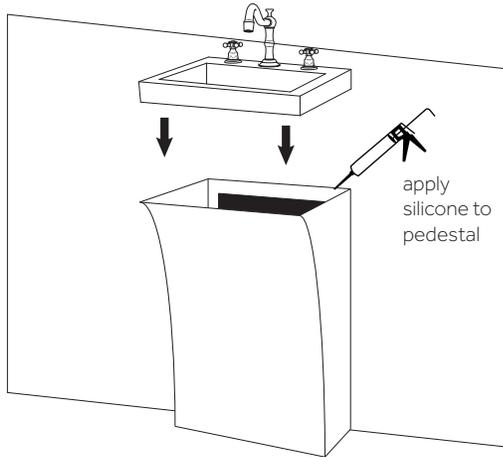

6. The remainder of the installation will need to be completed from the opposite side of the wall. From there, make all plumbing connections. Install the p-trap, water lines, shutoff valves, and any other necessary components to complete installation.

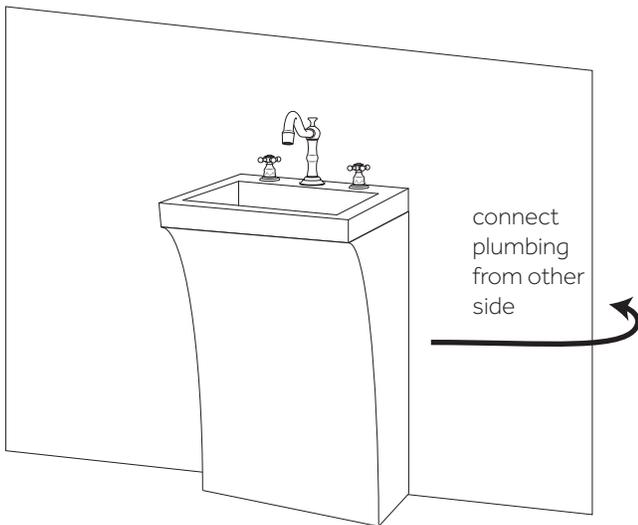

7. Once installation is completed, water test the sink and ensure that there are no leaks at any plumbing connection.

IMPORTANT: A 12"x12" access panel should be installed where the wall was opened from behind. This will allow quick access to the shutoff valves if needed.

