



SEMI-RECESSED SINK

BEFORE INSTALLING

Read entire Semi-Recessed Sink Installation Instructions. Observe all local building and safety codes.

INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1-866-855-2284. If you need assistance or have questions while installing your sink, contact Customer Service.

For this installation it is assumed that the vanity top has been cut to the dimensions of the sink. We recommend consulting a professional if you are unfamiliar with this type of installation. Signature Hardware accepts no liability for any damages to the floor, walls, plumbing or for personal injury during installation.

TOOLS AND MATERIALS:



Silicone Sealant



Damp Cloth




Thread Sealant




Basin Wrench

INSTALLATION

1. Carefully turn the sink over to rest upside down on the vanity top.

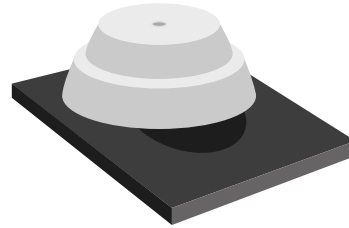


2. Apply a continuous bead of silicone to the outer edge of the sink where it will contact the vanity top.

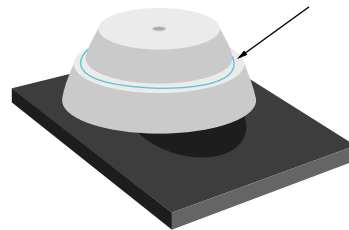

3. Turn the sink back over, placing it inside the sink cutout and position until centered.



4. Remove any excess silicone with a cloth moistened with water or mineral spirits. Let silicone dry for 24 hours. If a lavatory drain is included, move on to the Drain Installation section.

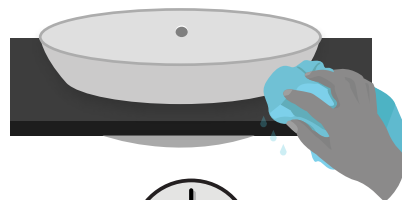





DRAIN INSTALLATION

DRAIN INSTALLATION


1. Disassemble the drain by removing the threaded tail piece, rubber sealing gaskets, friction washer, and lock nut from the drain body.

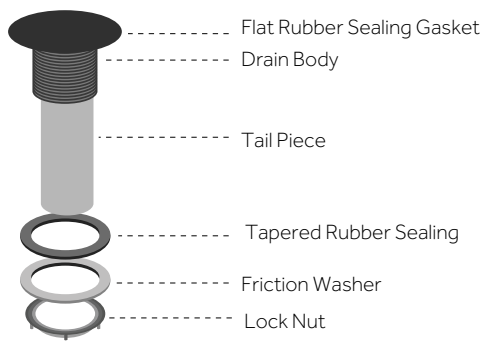

2. Place thread sealant on the threaded section of the tail piece and reattach to the drain body. Slide the flat rubber sealing gasket up the tail piece to the top of the drain body. This gasket will create a water tight seal between the drain flange and sink.

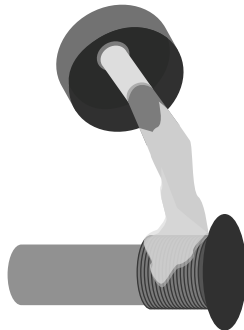

3. Place the drain in the drain hole in the sink. On the underside of the counter, attach the tapered rubber gasket. With the flat side facing down, slide the gasket up the threaded shank until it makes contact with the bottom of the sink.

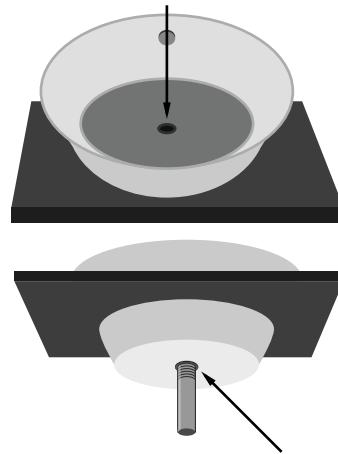

4. Slide the friction washer up to meet the rubber gasket. Thread the lock nut onto the threaded shank. Hand-tighten and make sure that the drain is properly aligned. When ready, finish tightening with a basin wrench to secure the drain.

