



WATTS WALL-MOUNT NON-MIXING KITCHEN FAUCET INSTALLATION

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, sink, counter top, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the faucet for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

TOOLS AND MATERIALS:



Plumbers
Tape



Thread
Sealant



Phillips
Screwdriver



Adjustable
Wrench



Small
Bucket




Basin
Wrench




WATTS WALL-MOUNT NON-MIXING KITCHEN FAUCET INSTALLATION

INSTALLATION


1. To prepare for faucet installation, two 1/2" IPS female fittings should be installed behind the finished wall.

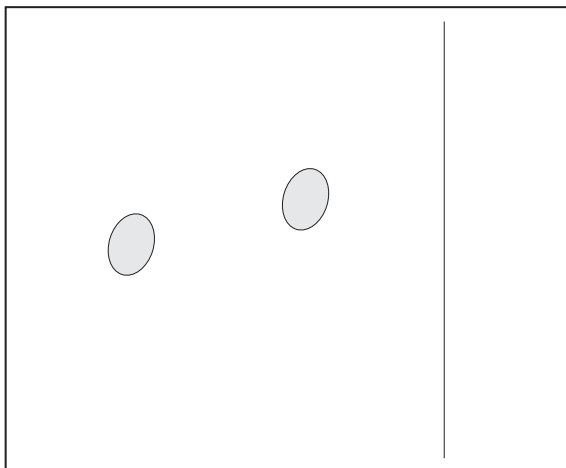

2. Attach the faucet couplers to the installed female fittings. Apply plumber's tape or thread sealant to the threads before tightening. Tighten firmly.

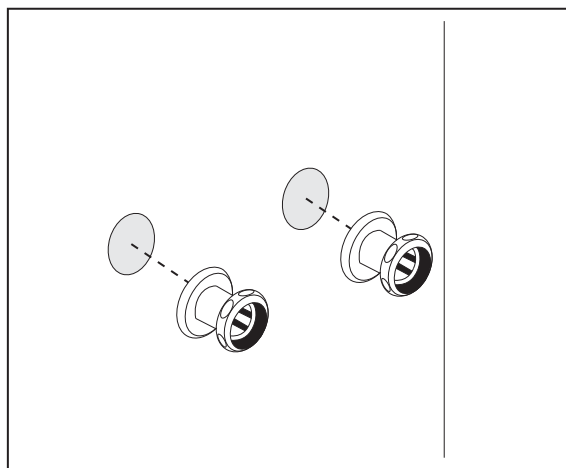

3. Attach each of the faucet spouts and valves to the installed faucet couplers. Tighten firmly using an adjustable wrench. **Tip:** Wrap the nuts with a cloth before tightening to avoid scratching the decorative finish.

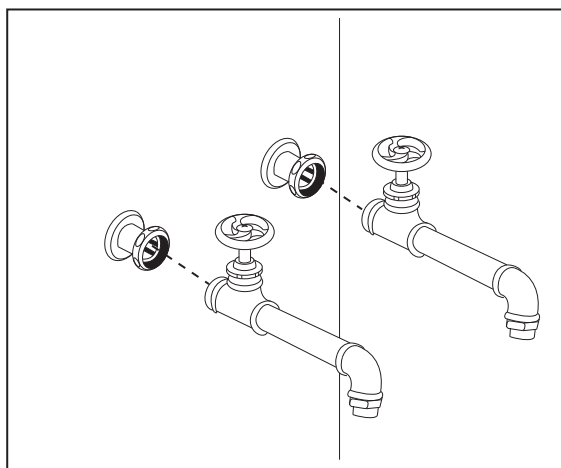

4. Once installation is complete, remove the aerators from the faucet spouts and turn each spout on to remove any dust or loose sediment within the water lines. Check for any leaks. Allow water to flow for 60 seconds. Reattach the aerators.

